



150 & 300 WATT SPEAKER SYSTEM

1. Connect microphone, or supplied audio cable, to any of the six channels along the bottom.
2. Connect speaker cables to jacks in the rear of the unit, labeled SPEAKERS. Connect the other end to the jacks in the back of the speakers.
3. Adjust the main volume on the right side under MAIN to $\frac{1}{2}$ way.
4. Turn the volume down on the channel you are connected to, and turn on the power switch located in the lower right.
5. Each channel has its own volume, tone, and effects control knobs just above it. Adjust the volume on each item you have plugged in until the desired level is reached. DO NOT point the microphone in the direction of the speakers or it will feedback and screech.
6. On the right side of the unit under the word MAIN are slides which adjust equalization. Raising the slides on the left give more bass, and the ones to the right add more treble and high tones.
7. Under the equalization is the effects knob and display.
8. Try any of the 99 preset sounds for fun.



CAUTION



DO NOT use product near water.

Power supply cords should be routed so they are not walked on or pinched by items placed upon them.