



HOT DOG ROLLER

OPERATION

1. To avoid equipment or electrical damage, make certain that the nameplate voltage is the same as the outlet voltage.
2. Electrical and grounding connections must be in compliance with the applicable portions of the electrical code.
3. Prior to use, it is recommended that you wipe the rollers of the machine with a cotton cloth or wipe-pad.
4. Evenly place **UNFROZEN** hot dogs on the rollers.
5. The left knob handles the front rollers, and the right knob handles the back rollers.
6. Turn the roller switches on the control plate to "ON". These switches control the rotation of the rollers.
7. Turn the knob to desired heat level. After 40 minutes of heating the hot dogs, turn the temperature knob lower to continuously keep warm.
8. The heating duration depends on the hot dog quality. Please adjust as needed or required. Average heating duration is 40 minutes, but may vary.

CLEANING

1. To avoid electric shock or scalding, unplug the power cord and allow unit to cool before cleaning.
2. Do not submerge the hot dog grill in water, or directly apply liquids to clean the unit.
3. When cleaning the rollers, wipe from the end of the rollers to the center. This will reduce the grease and particles getting into the bearings.
4. For products with a high fat or sugar content, clean the rollers every 3-4 hours.
5. Remove the hot dogs from the rollers when wiping. **DO NOT** touch the heated rollers directly as this could result in a burn or scalding.
6. **DO NOT** clean roller tubes with abrasive cleaners or scouring pads because this may damage the roller's surfaces and the particles may get into the bearings.

SUGGESTIONS

Hot dogs must be fully **UNFROZEN**.

Do not keep the hot dogs warm for too long in order to keep the juicy taste. If warming for more than four hours, the surface of hot dogs may become thick and hard.



CAUTION



DO NOT submerge unit and/or cord in water or any other liquids. Failure to heed this warning may result in electric shock, unit damage and/or bodily injury.

Close supervision is recommended when unit is in use, especially when children are present.

Check to ensure unit is in "OFF" position and unplugged when not in use or prior to cleaning.

Allow grill to cool completely before cleaning.

DO NOT operate if the machine suffers serious damage or malfunctions.

DO NOT use outdoors.

DO NOT let cord hang over the edge of table or counter, or allow it to touch hot surfaces.

DO NOT place unit on or near gas or electric burners or heated ovens.

Securely insert plug into outlet. When unplugging, be sure to remove by plug only. Never pull or remove by power cord.