



## POPCORN POPPER

### OPERATION

There are three switches on the popper:

1. LIGHT and WARMER SWITCH turns on heat to bottom corn pan and light.
2. KETTLE MOTOR SWITCH turns on motor which drives kettle agitator shaft.
3. KETTLE HEAT SWITCH turns on heat element.

NOTE: Make sure all machine switches are in the OFF position before plugging in the equipment.

### POPPING INSTRUCTIONS

1. Turn KETTLE HEAT and KETTLE MOTOR switches ON.
2. Load pre-measured popcorn and oil pouch into kettle.
3. When corn has finished popping, dump kettle.
4. Repeat cycle starting with #2.
5. Turn off KETTLE HEAT switch halfway through the last popping cycle to eliminate smoking.

NOTE: always pop pre-measured packages for best popcorn.

### CLEANING

Remove any remaining popcorn out of the machine.

NOTE: NEVER immerse any portion of the kettle in water.



## CAUTION



DO NOT use another appliance on the same electrical circuit as the popper.

DO NOT TURN THE MACHINE ON WHILE EMPTY.

DO NOT immerse any part of the popper in water.

DO NOT take popper apart.

To avoid serious burns, DO NOT touch the kettle while it is hot.

Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.

Machine must be properly grounded to prevent electrical shock.

ALWAYS unplug the equipment before cleaning.