



## SNOW MACHINE

### OPERATION

1. Place machine on a flat surface and remove snow liquid tank cap.
2. Fill with snow liquid (dealer recommended high quality, water-based snow fluid).  
NOTE: Any other types of fluid can damage the unit.
3. When filled, place cap back on liquid tank.
4. Firmly attach the 3 pin connector on the remote control cable to the proper input on the rear of the machine.
5. Plug power cord into a grounded electrical outlet. Turn power switch on rear of unit to ON position.
6. To emit snow, press the appropriate button on the remote for the desired length of time.
7. Two pilot lamps on the remote control indicate power and operation status.
8. Use the adjustable knob on the remote control to regulate the volume of snow output.

### LOCATION

The snow machine may be installed at floor level or suspended overhead. When mounting the unit overhead, it is important that the snow does not shoot directly at anyone's face. Ensure the machine is mounted securely. Whatever installation method you choose, DO NOT allow the unit to have more than a 15° angle of inclination.

**NOTE:** 1 gallon of snow liquid will run for approximately 40 minutes.



## CAUTION



The machine **MUST** be properly grounded to prevent electrical shock.  
**NEVER** allow the snow to shoot directly at anyone's face.  
If mounted, **ENSURE** the unit is mounted securely.