



## INDUCTION COOKER

This unit is intended to be used with induction ready cookware only. Please read thoroughly prior to equipment set-up.

### HOW TO USE

1. Always use on a firm, dry and level surface at least 12" from walls or any other obstruction.
2. Do not use outdoors.
3. Induction cookware must be made of a magnetic-based material, such as cast iron or magnetic stainless steel.
4. Place suitable cookware on the induction cooker plate. Connect the plug to an appropriate socket. Plug only into a 3-hole grounded electrical outlet. Once connected, the POWER light will display, indicating the power is connected normally.
5. After pressing the HEATING button, the HEATING light will display indicating that the induction cooker is heating up; the default power heating is 1200W. Adjust the power from levels 500W-1800W.
6. After pressing the TEMP button, the KEEP TEMP light will display indicating the unit is heating up to sustain temperature. The default temperature is 430°F.
7. Adjust the time from 0 minutes to 170 minutes by "▲" or "▼" at the Time function.
8. When pressing ON/OFF during usage, the induction cooker will stop working immediately. Once not in use, the fan will cool down the unit for one minute, and then will turn off.
9. The induction cooker will shut off automatically if there is no operation within 2 hours.

### CLEANING

NEVER immerse the unit in water or any other liquid. If liquid enters the unit, it may cause a short circuit or electrical shock.

1. Before cleaning or attempting to move, unplug and let the unit cool completely
2. Wipe the entire unit with a clean soft cloth and mild soap
3. To avoid damage, do not use abrasive cleaners or scouring pads
4. Use a vacuum cleaner to clean any dirt from the air intake and exhaust valve





## INDUCTION COOKER

### TROUBLESHOOTING

ERROR MESSAGE	CAUSE	SOLUTION
E01	The cooker has become too hot (e.g. due to blocked ventilation slots).	Clear vents, let cooker cool down before restarting. If error message continues, contact Adams.
E02	Overheating protection was activated and the cooker has switched off.	Remove cookware from cooker and let unit cool down before restarting. Also please check whether the pan is suitable for induction cooker.
E03	Temporary voltage overload.	Let cooker cool down before restarting.



## CAUTION



- Do not plug into an electrical outlet with wet hands EVER
  - Plug only into a 3-hole grounded electrical outlet
  - Do not use this unit for anything other than intended use
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury.
  - All repairs should be done by authorized professionals only
    - Keep children and animals away from unit
    - Do not operate unattended
  - Always use on a firm, dry and level surface at least 12" from walls or any other obstruction
    - Do not use with an empty pot or overheat
  - Do not place metallic objects such as knives, forks, spoons, lids, cans or aluminum foil on plate
    - Do not use on carpet, tablecloth or any other low-heat-resistant surface
  - Do not place the cooker close to the objects which are affected by magnets, such as: radios, televisions, credit cards
    - Unplug appliance when it is not in use
    - Do not use outdoors
- Allow unit to fully cool and unplug before attempting to move or clean. NEVER immerse the unit in water or any other liquid. If liquid enters the unit, it may cause a short circuit or electrical shock
  - Pressing the on/off button at any time during operation will shut the unit off
  - There is an automatic shutoff which will take effect after 2 hours of non-operation